HOME DECORATORS

collection

BF-24675 MSL STORAGE HUTCH 34"H× 42"W

ASSEMBLY INSTRUCTIONS

Made In China

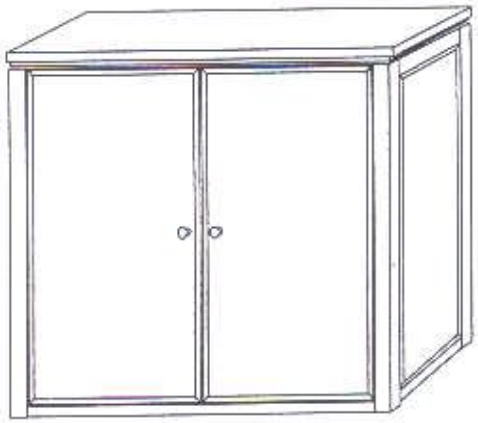

Thank you for purchasing this quality product.Be sure to check all packing material carefully for small parts,which may have came loose inside the carton during shipment. Count all parts and material hardware,Compare with parts list to be sure all part are present.If any parts are missing or damaged,phone,fax,or mail to our Customer Service Department.For efficient and speedy service please indicate the model number and code letter of part(s)need

IMPORTANT NOTE: Follow instructions listed below in proper sequence as numbered to assure fast,easy and correct assembly.

PARTS LIST

A TOP PANEL-1PC	B RIGHT SIDE PANEL-1PC	C LEFT SIDE PANEL-1PC
D 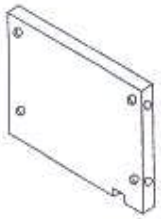 LEFT ACROSS PANEL-1PC	E 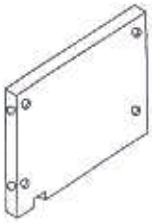 RIGHT ACROSS PANEL-1PC	F BACK PANEL-2PCS
G MIDDLE BACK PANEL-1PC	H BACK PANEL GUIDE-2PCS	I ADORNING PANEL-1PC
J  SHELF PANEL-4PCS	K 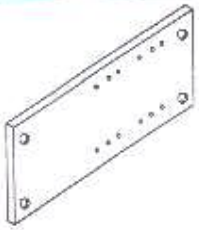 STAND PANEL-1PC	L 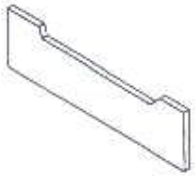 DRAWER PANEL FRONT-2PCS

M

LEFT
DRAWER SIDE PANEL-2PCS

N

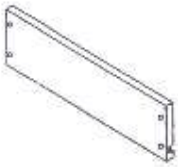

RIGHT
DRAWER SIDE PANEL-2PCS

O

DRAWER
PANEL BOTTOM-2PCS

P

DRAWER PANEL BACK-2PCS

Q

BOTTOM PANEL-1PC

R

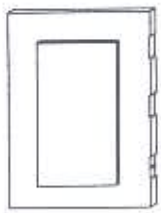

LEFT DOOR-1PC

S

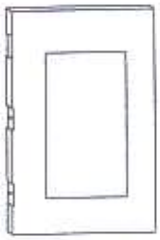

RIGHT DOOR-1PC

T

CAM-BOLTS-22PCS

U

CAM-LOCKS-22PCS

V

HINGE-6PCS

W

SCREWS-36PCS

X



LARGE MAGNETS 1PC

Y

FEMALE MAGNETS-2PCS

Z

SCREWS-2PCS

A1

CAM-LOCKS CAP-8PCS

B1

KNOB-2PCS

C1

SCREWS-2PCS

D1

CAM-TOOL-1PC

E1 SCREWS-24PCS	F1 SHELF SUPPORT-16PCS	G1 SCREWS-44PCS
H1 HOOK-2PCS	I1 EVA PAD-6PCS	J1 SCREWS-6PCS
K1 HANGER-2PCS	L1 SCREWS-5PCS	M1 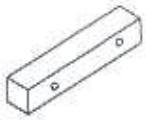 PANEL-2PCS
N1 PLATE-2PCS	O1 FELT PAD-8PCS	

NOTE:THE SURFACE WITH THE STICKER IS THE BACK SIDE.

NOTE: • UPON OPENING THOROUGHLY CLEAN ALL WOODS SURFACES TO REMOVE DUST AND DIRT THAT MAY HAVE SETTLED ONTO FINISH DURING SHIPMENT.IN ORDER TO PREVENT DAMAGE DURING ASSEMBLY,PLEASE ASSEMBLE THIS ITEM WITH AT LEAST TWO PEOPLE.

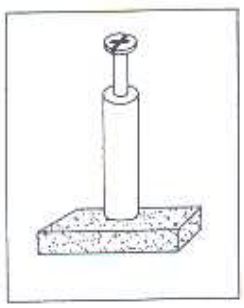

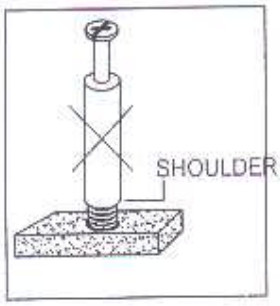

NOTE: TURN THE CAM-BOLT SCREWS UNTIL THEY ARE TIGHT, THE SHOULDER SHOULD BE AGAINST THE SURFACE OF THE PART.

HOW TO USE THE CAM-TOOL

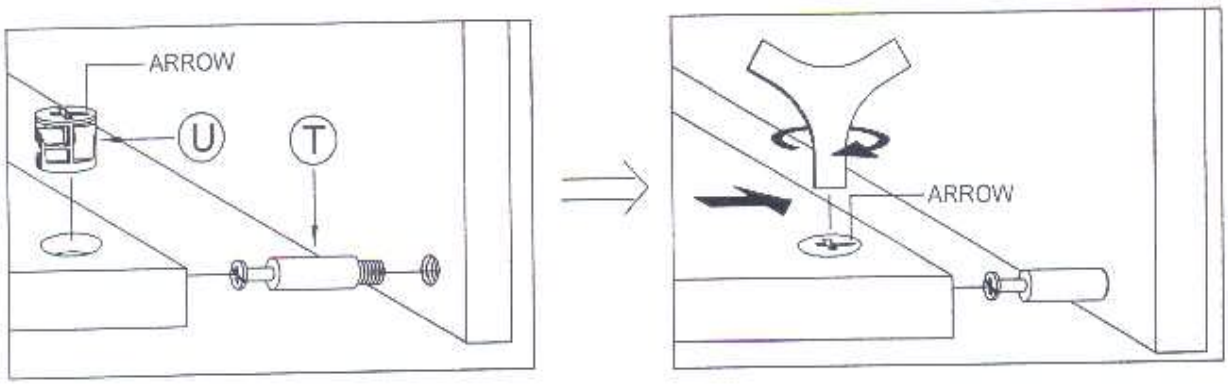

NOTE: • THE ARROWS ON THE HIDDEN CAM-LOCKS SHOULD POINT TO THE CAM-BOLTS

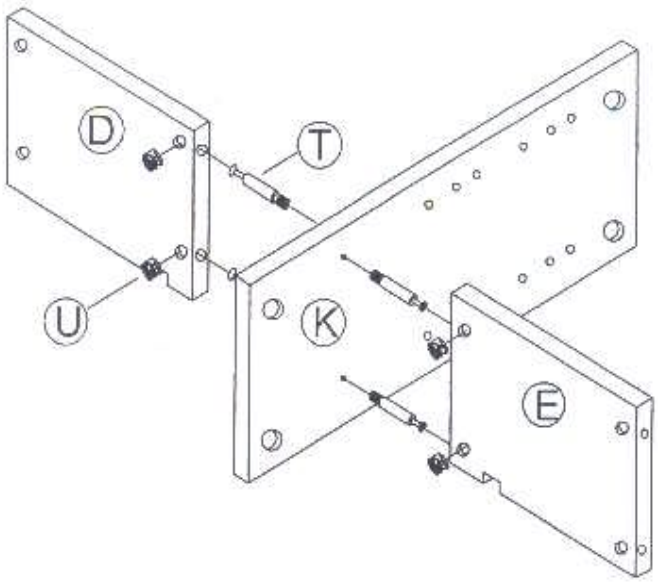

1). ASSEMBLE THE STAND PANEL(K).

- ROTATE THE 4 CAM-BOLTS(T)INTO HOLES IN STAND PANEL(K).
- PLACE CAM-BOLTS(T)INTO HOLE IN PANEL(D/E)AND ATTACH USING 4 CAM-LOCKS(U).

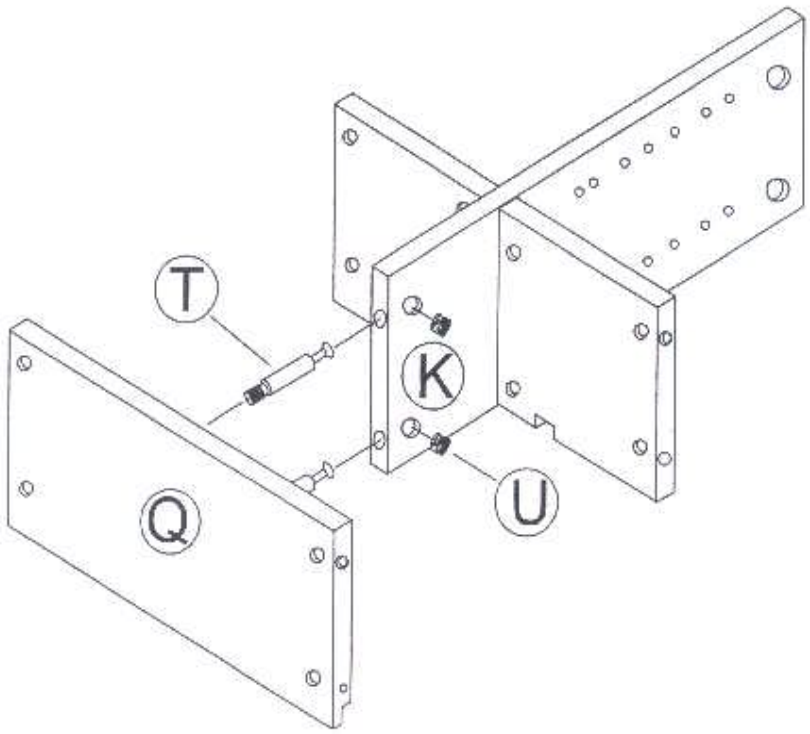

2). ASSEMBLE THE BOTTOM PANEL(Q).

- ROTATE THE 2 CAM-BOLTS(T)INTO HOLES IN BOTTOM PANEL(Q).
- PLACE CAM-BOLTS(T)INTO HOLE IN PANEL(K)AND ATTACH USING 2 CAM-LOCKS(U).

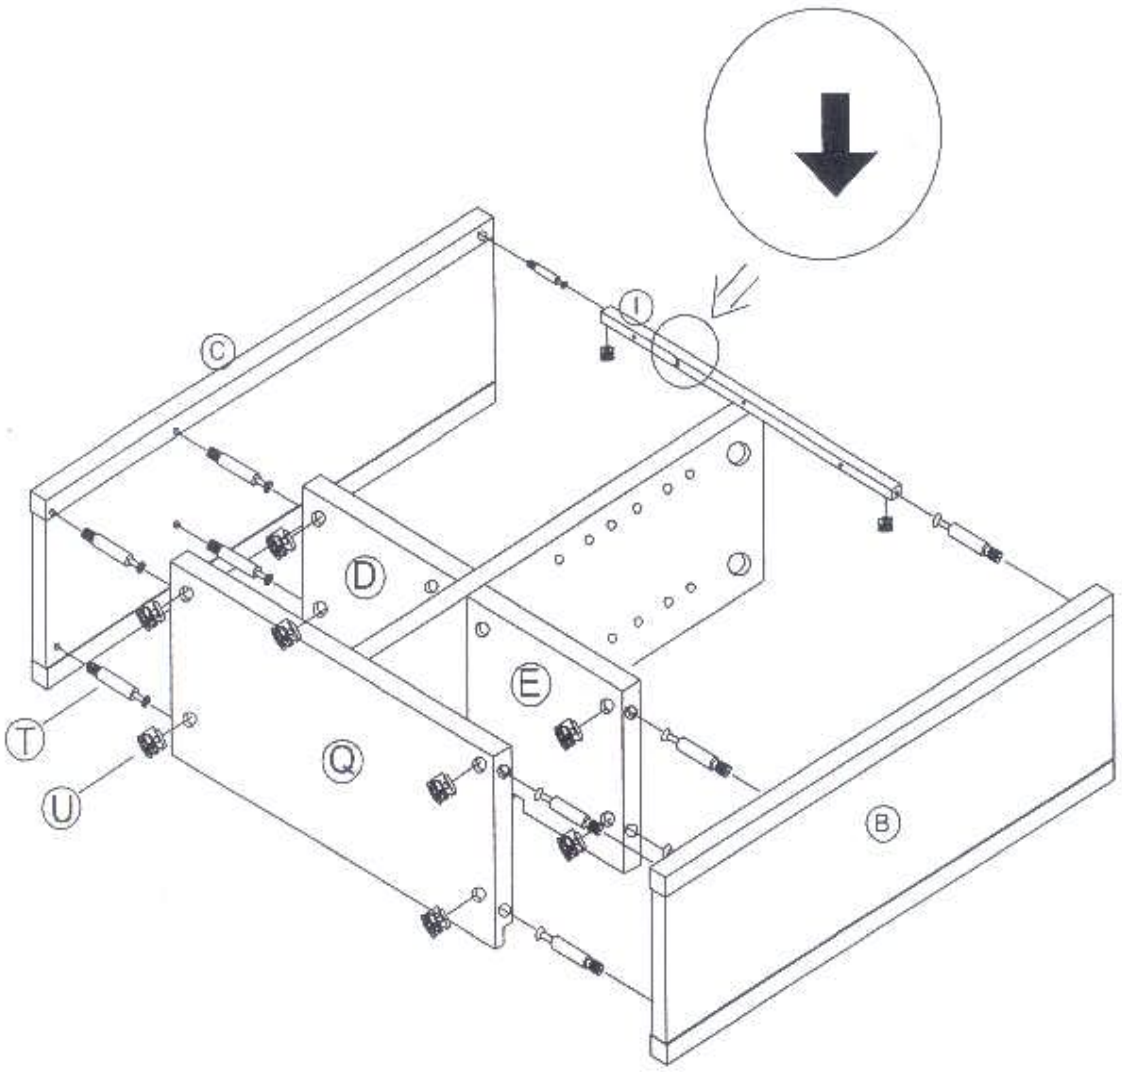

3). ASSEMBLE THE SIDE PANEL(B/C).

- ROTATE THE 10 CAM-BOLTS(T)INTO HOLES IN SIDE PANEL(B/C).
- PLACE CAM-BOLTS(T)INTO HOLE IN PANEL(D/E/Q/I)AND ATTACH USING 10 CAM-LOCKS(U).

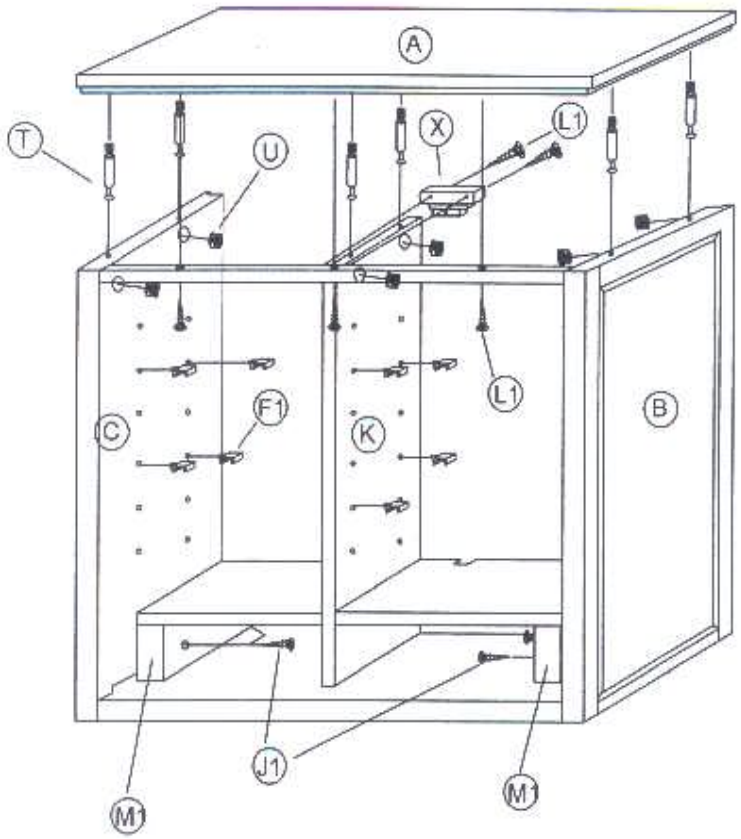

4). ASSEMBLE TOP PANEL(A).

- ATTACH MAGNETS(X)TO ADORNING PANEL(I)USING 2 SCREWS(L1).
- ROTATE THE 6 CAM-BOLTS(T)INTO HOLES IN TOP PANEL(A).
- PLACE CAM-BOLTS(T)INTO HOLE IN PANEL(B/C/K)AND ATTACH USING 6 CAM-LOCKS(U).
- INSERT THE SHELF 16 SUPPORT INTO HOLES IN SIDE/STAND PANEL(B/C/K).
- ATTACH 2 PANEL(M1)TO SIDE PANEL(B/C)USING 4 SCREWS(J1).

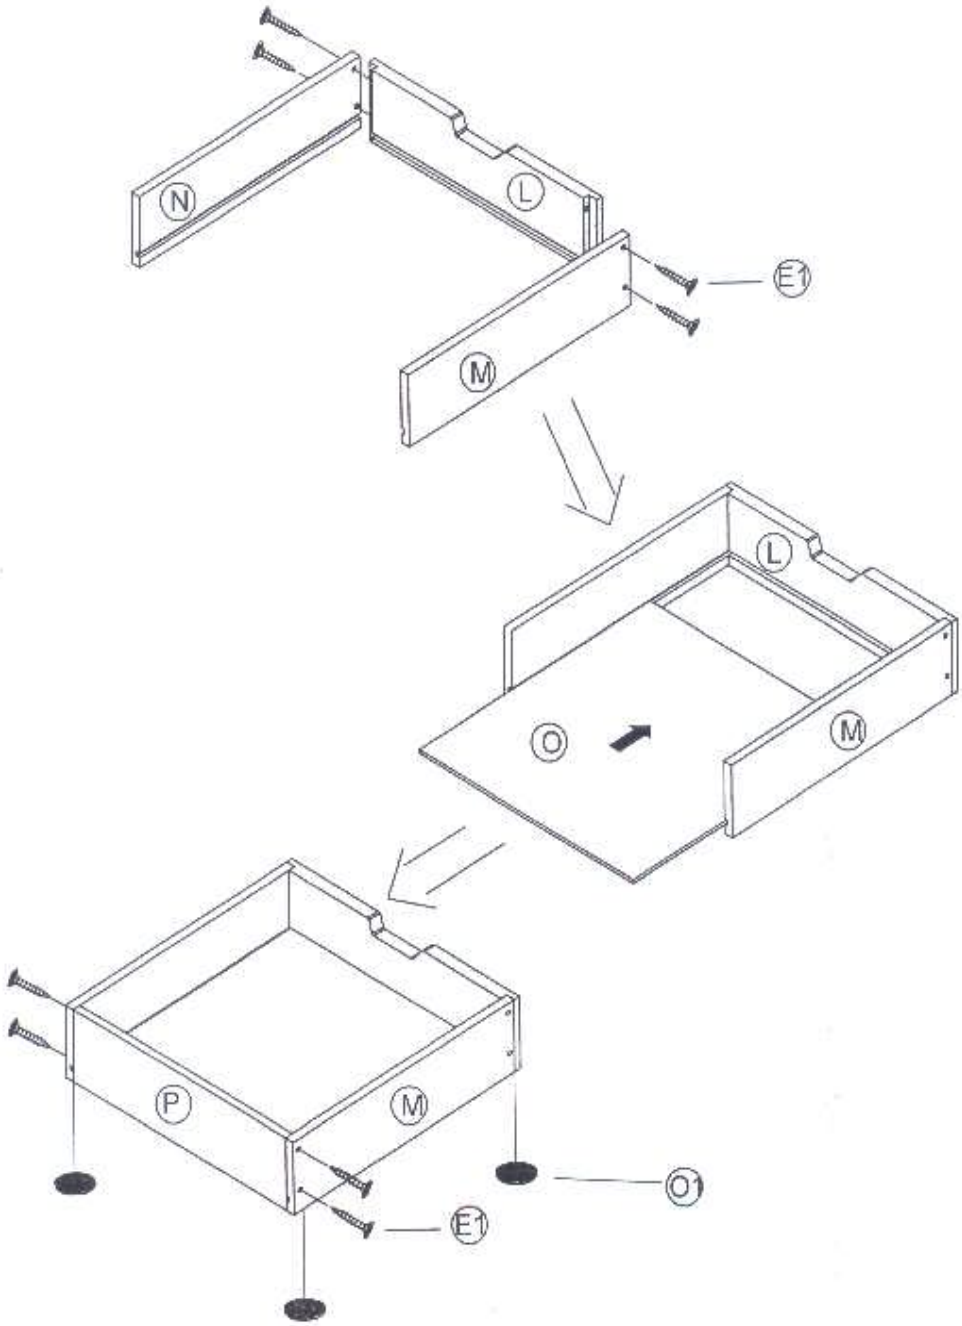

5). ASSEMBLE THE DRAWER.

- ATTACH DRAWER PANEL SIDE(M/N)USING 4 SCREWS(E1).
- INSERT THE DRAWER PANEL BOTTOM(O)INTO SLOTS IN DRAWER PANEL SIDE(M/N).
- ATTACH DRAWER PANEL BACK(P)TO BETWEEN SIDE DRAWER PANEL(M/N)USING 4 SCREWS(E1).
- ATTACH THE 4 FELT PAD(O1)TO DRAWER SIDE PANEL(M/N).

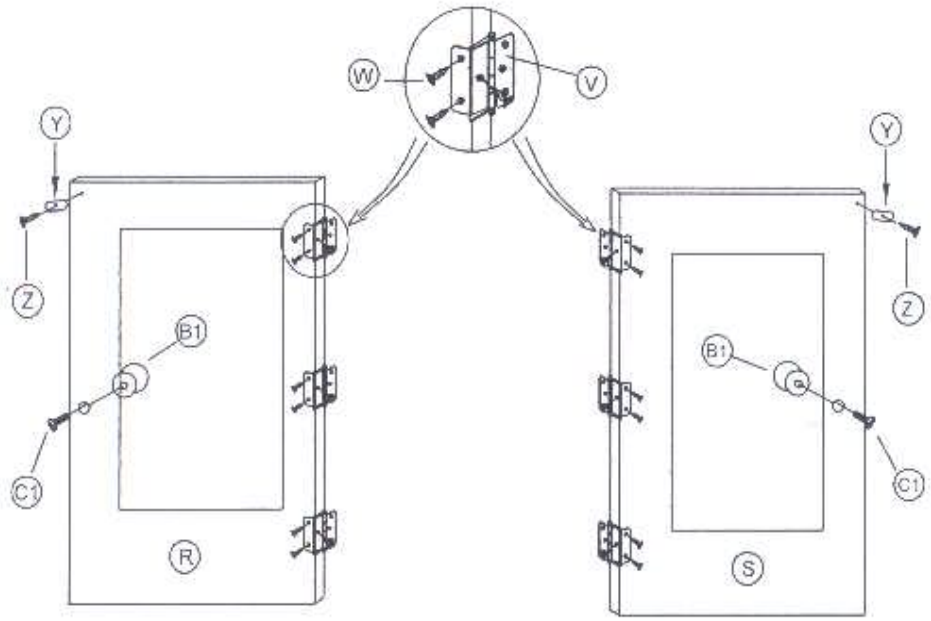

6). ASSEMBLE THE DOOR(R/S).

- ATTACH THE 2 FEMALE MAGNETS(Y)TO DOOR(R/S)USING 2 SCREWS(Z).
- ATTACH 6 THE HINGE(V)TO DOORS(R/S)USING 18 SCREWS(W).
- ATTACH 2 KNOB(B1) TO DOOR(R/S) USING 2 SCREWS(C1).

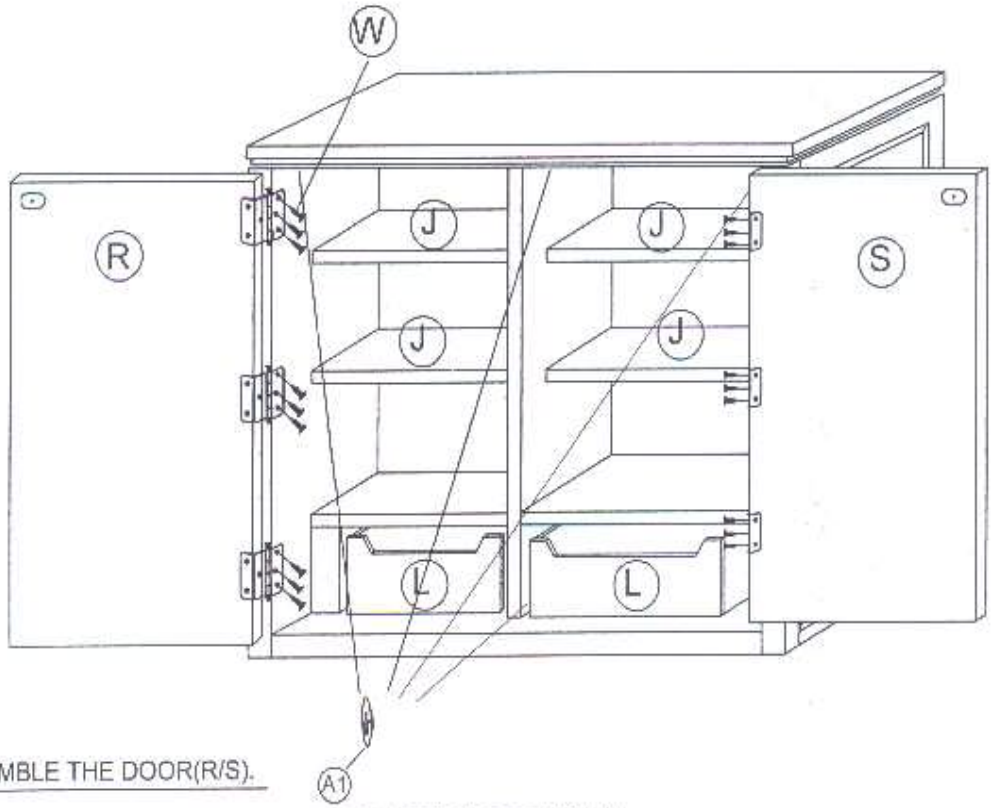

7). ASSEMBLE THE DOOR(R/S).

- ATTACH 6 THE HINGE(V)TO SIDE PANEL (B/C) USING 18 SCREWS(W).
- PLACE THE SHELF(J) ONTO THE SHELF SUPPORT.
- PLACE THE DRAWER ONTO BOTTOM PANEL.
- ATTACH THE CAM-LOCK(U)USING 8 CAM-LOCK CAP (A1).

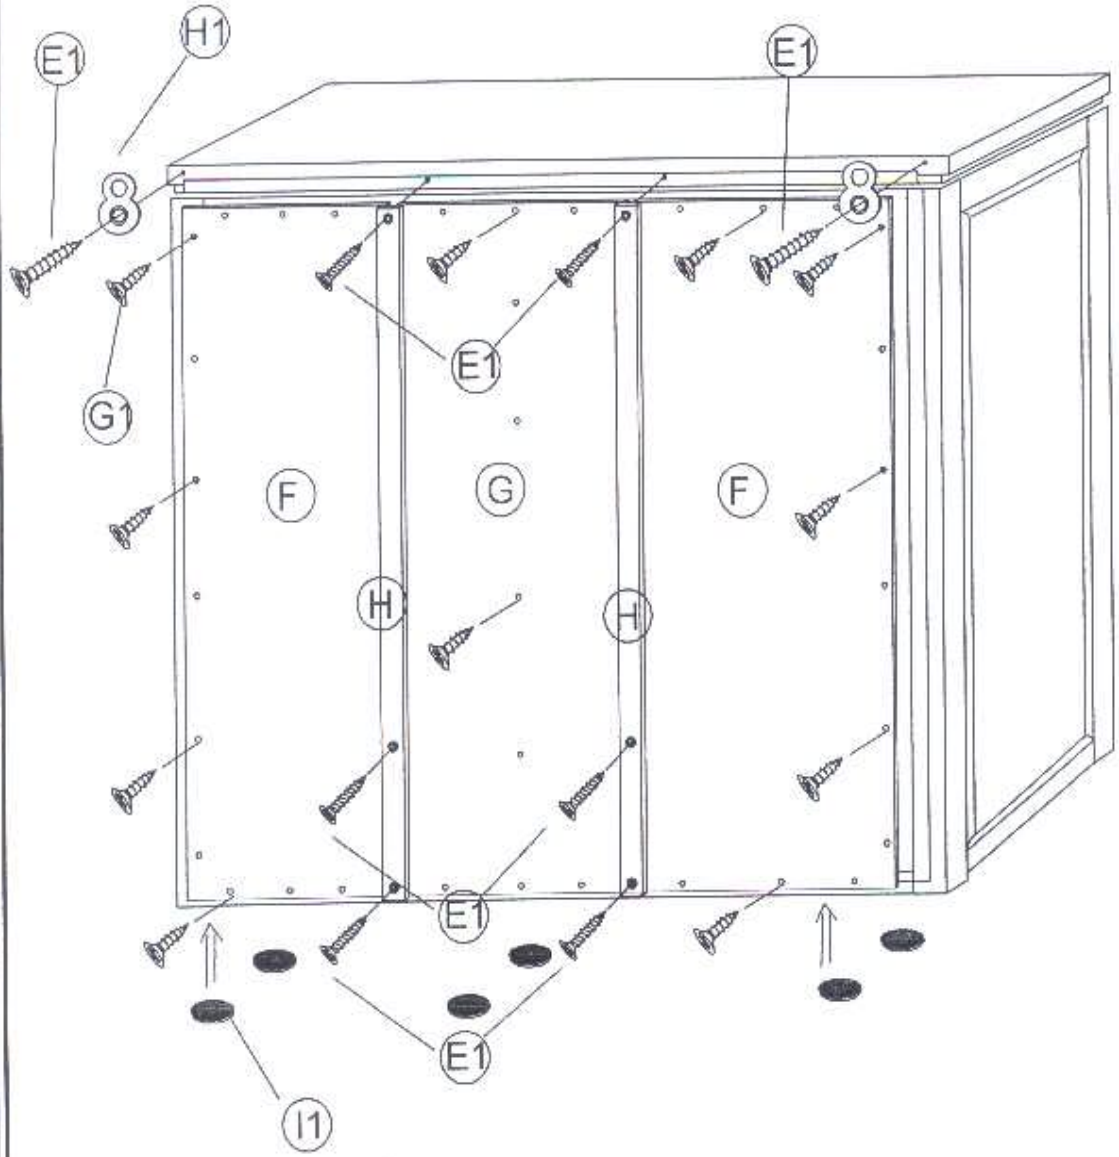

8).ASSEMBLE THE BACK PANEL(F/G).

- INSERT THE BACK PANEL(F/G)INTO SLOT IN REAR PANEL GUIDE(H).
- ATTACH THE BACK PANEL(F/G)AND REAR PANEL GUIDE(H)USING SCREWS(E1/G1).
- ATTACH THE 6 EVA PAD(I1)TO BOTTOM PANEL
- ATTACH 2 HOOK(H1)USING 2 SCREWS(E1)IN THE PREDRILLED HOLES OF TOP PANEL(A).

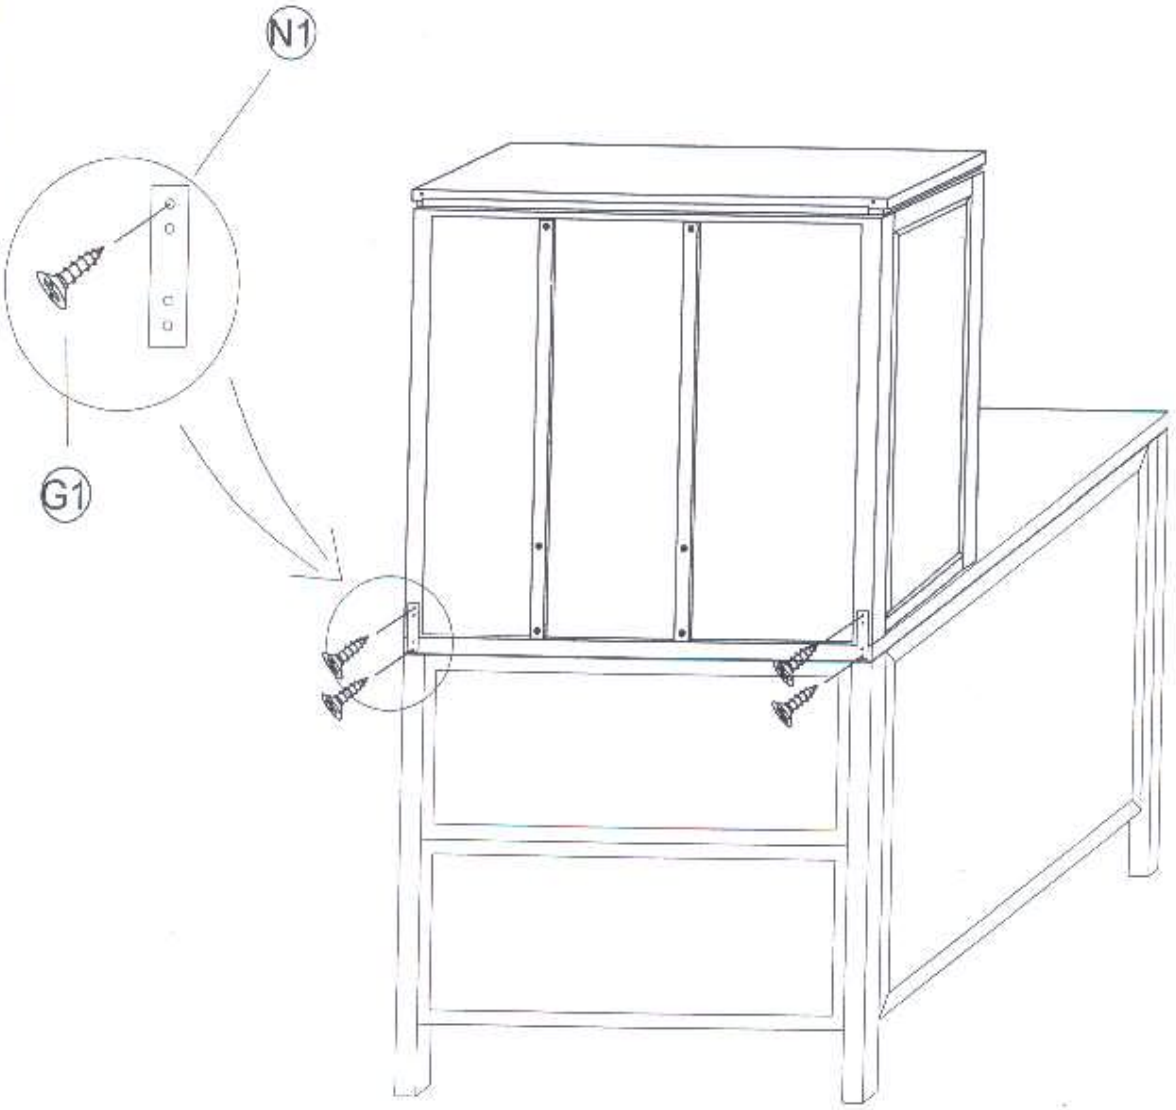

9).ASSEMBLE THE PLATE(N1).

- ATTACH THE PLATE(N1)TO SIDE PANEL(B/C)USING 8 SCREWS(G1).

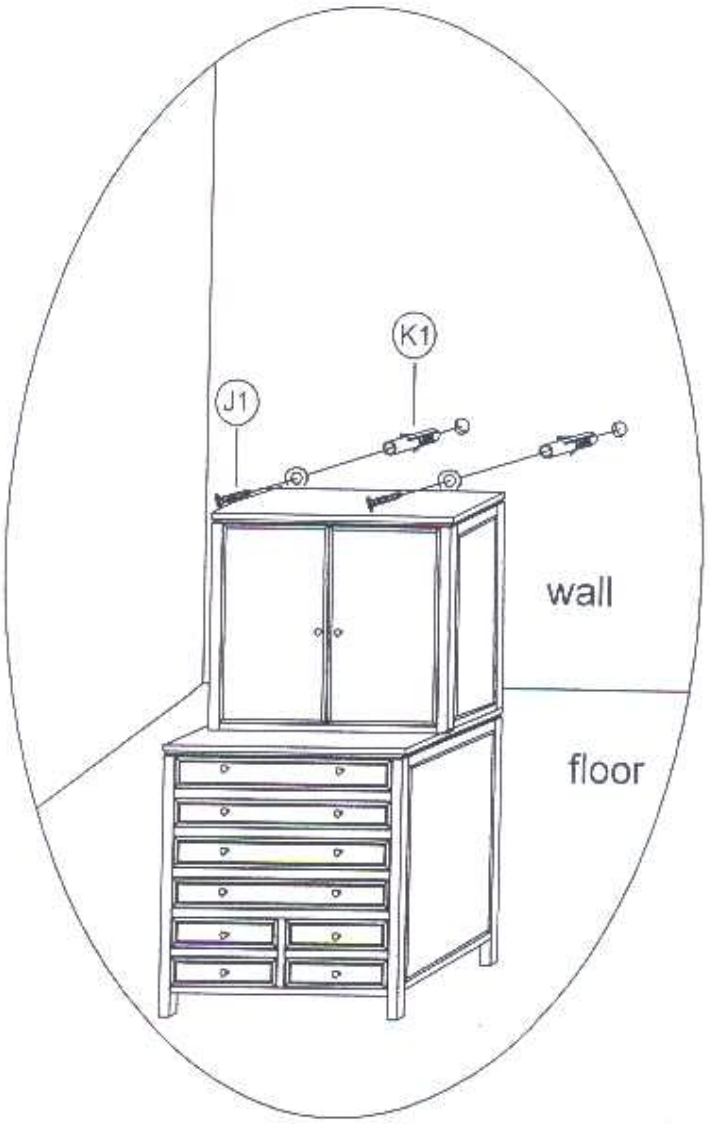

10).ASSEMBLE THE HANGER(K1).

- DRILLING 2 HOLES ON THE WALL IT AS BETWEEN TOP PANEL HOLES DISTANCE.
- PUT 2 HANGER(K1)HIT INTO HOLES IN WALL AND ROTATE 2 SCREWS(J1)INTO HANGER(K1).